

# QUICK START—NAV DATABASE LOADING



The navigation database is on one USB Flash drive or SD card. Use the following procedure to install the nav database in your FMS.

The DISK MENU may be located by two means.

1. Turn on the FMS. After the FMS completes its power on self-test and the INIT page appears, press the MENU key.

**NOTE:** The expiration date shown is the expiration date of the ACTIVE database. For most late model FMSs this will not indicate the expiration date of the newly loaded database until that database has been activated or becomes effective.

2. If you are past the INIT page, select the DATA key and you should be on DATA page 1/4.

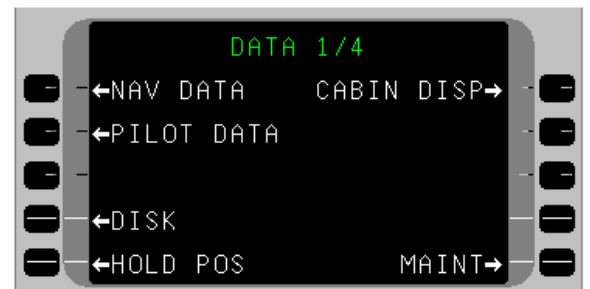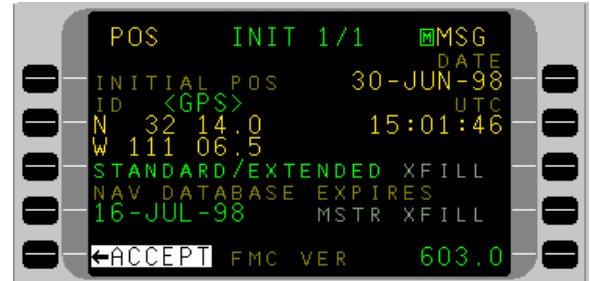


Press the DISK LOAD line select key.



Place the media into the SSDTU.

Press the CONTINUE line select key

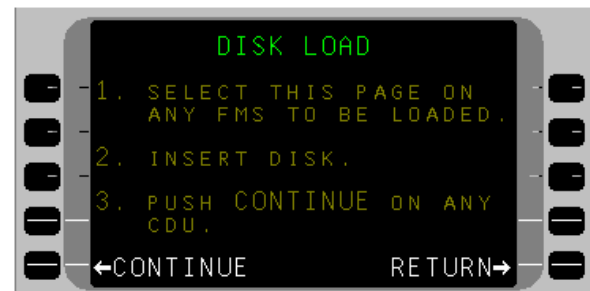

For Dual FMS installation, select the first DISK LOAD page on both FMS CDUs. Select one CDU to be “Master” and press “CONTINUE”. The other CDU will now be the “Slave” and follow the commands of the Master CDU with an approximate five-second delay. **DO NOT** press CONTINUE on the Slave CDU. This action will result in the database load being unsuccessful

The FMS will interrogate the disk and return to the DISK LOAD page.

Press the LOAD line select key.

The UNS 1B+ can contain only a single nav database. Loading of the nav database will result in the erasing of the old nav database

Most late model FMS have dual nav databases. Loading the nav database will erase only the inactive nav database

During the navdata load, the load status is displayed.

When the navdata is received, the FMS will test the data for corruption. When testing is complete, the LOAD NEXT selection will be presented, prompting for loading of the Company Routes database, if applicable. Otherwise, press the CHECK ALL or the RETURN line select key.

If a CHECK ALL line select key is presented, press this key. When this occurs, the loaded nav database will become the active database. This will always occur on the UNS 1B+ and if the active nav database is out of date on a late model FMS.

Press the DB STATUS line select key to display the nav database status

You have now completed the loading of the nav database.

